

HÅG Capisco™



Keep your chair free from dust and dirt. Clean the upholstered parts with damp or dry cloth. Do not remove any covers or try to open the seat mechanism. If technical maintenance is needed, or if the gas lift needs to be replaced or repaired – contact your dealer or ergoCentric directly. Make sure that you have chosen the right casters for the floor surface where you intend to use the chair (casters with rigid wheels for carpeted floors, casters with resilient tyred wheels for hard floor covering). The chair has been tested with appropriate casters so that the unloaded chair will not roll unintentionally. All five casters must be of the same type.

COMPONENT	MATERIAL RESOURCES	MATERIAL RECYCLING	ENERGY RECOVERY
Seat mechanism	Steel	✓	
Footbase	Aluminum	✓	
Seat foam	PUR foam		✓
Seat and back shell	Plastics	✓	
Seat	Textile		✓
Back stem	Aluminium	✓	
Packaging	Cardboard	✓	
Casters, lift	Misc.	✓	✓

The chair can be dismantled without use of special equipment.
Plastic components heavier than 50g are labelled for easy sorting and recycling.

