

ergoCentric®

Digital Display Control
with 4 Position Memory



Adjusting the upCentric Electric Height Adjustable Table is intuitive with the digital display control with 4 position memory.



Overview

1. Digital display height read-out
2. Intuitive up/down buttons for quick and easy height adjustment 4 programmable positions

Operation

How to Set a Memory Position

1. Use the up and down buttons to adjust table to the desired height.
2. Hold the up button and the desired memory button (1, 2, 3 or 4) together until it beeps and P1, P2, P3 or P4 is shown on the display screen.

How to Move Table to Saved Position

1. Press and hold the memory button(1, 2, 3 or 4) until the table adjusts to the saved position.

How to Reset

1. Press and hold the up/down buttons on the handset at the sametime for 3 seconds.
2. Continue holding the buttons until both legs reach the lowest position.
3. When finished resetting, the handset will make a sound and the buttons can be released.