


HPL Modesty Panel Corner Connector Kit


Installation Guide

Please refer to the panel installation guide for more details and panel installation template.


Parts:




x8 #8 x 7/8"
Pan head screws

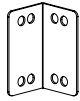



x2 Brackets

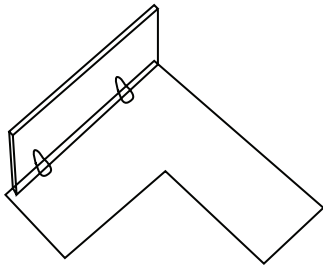

Step 1. Install the first panel on desired tabletop edge, aligning the panel with the edges of the back corner where the two panels will intersect.

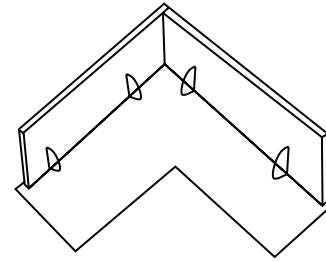

Step 2. Install second panel on the perpendicular tabletop edge, aligning the panel with the first panel and the back edge.

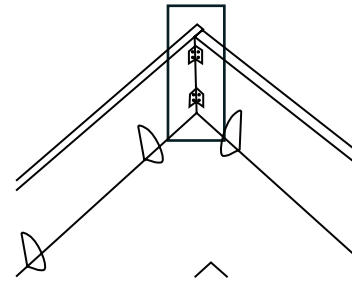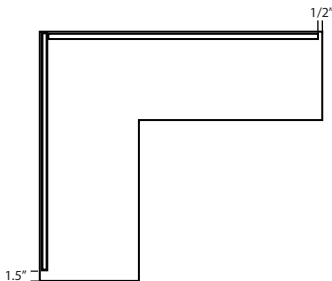

NOTE: Once installed, the panels should line up and overlap at the connecting corner, leaving approximately a 0.5" gap at one end and a 1.5" gap at the other end.

Step 3. Attach panels in the corner using 2x brackets and 8x #8 x 7/8" pan head screws.