

airCentric™ 2

How to add a headrest

Tools required:

- Scissors
- Tape
- Power drill
- 3/8" drill bit

Note: All measurements should be taken from the edge of the plastic, not the foam.

Step 1

Print the Installation template at actual size on legal size paper (8.5" x 14"). Cut at the corresponding dotted line. Make a small hole on the paper at the center of markings before aligning it on the chair.

Step 2

Align template to the top of the back cap and top corners evenly. Align the screw holes of the template to the holes on your chair for accuracy. Add tape to hold the template in place, then use template or dimensions to make markings on the chair.




Need help? Contact us:

ph: 1 866 GET ERGO | 905 696-6800
fx: 1 800 848-5190 | 905 696-0899
orders@ergocentric.com

ergoCentric®
The science of sitting™

airCentric™ 2

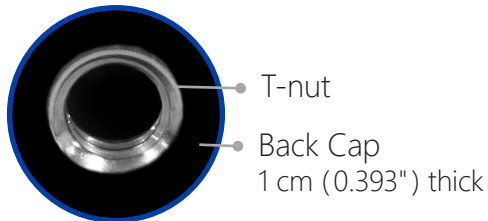

Step 3

Drill the 0.375" holes, no more than 1 cm (0.393") deep into the back cap. This will expose the T-nuts in the backrest.

Do not drill into the T-nuts

Do not worry about the quality of the holes drilled, they will be completely covered by the headrest brackets.

Step 4

Align the newly created holes with the holes in the headrest brackets. Install the two M6x25mm pan head fasteners provided, securing the headrest to the back of the chair.



Need help? Contact us:

ph: 1 866 GET ERGO | 905 696-6800
fx: 1 800 848-5190 | 905 696-0899
orders@ergocentric.com

ergoCentric®
The science of sitting™



Align to top of the back cap

Installation Template

airCentric 2 headrest

Align screw hole here
(step 2)

Align screw hole here
(step 2)

Drill here

Drill here

Need help? Contact us:

ph: 1 866 GET ERGO | 905 696-6800
fx: 1 800 848-5190 | 905 696-0899
orders@ergocentric.com

ergoCentric[®]
The science of sitting™