





Assembly instructions

↑pCentric®


Monitor sliders

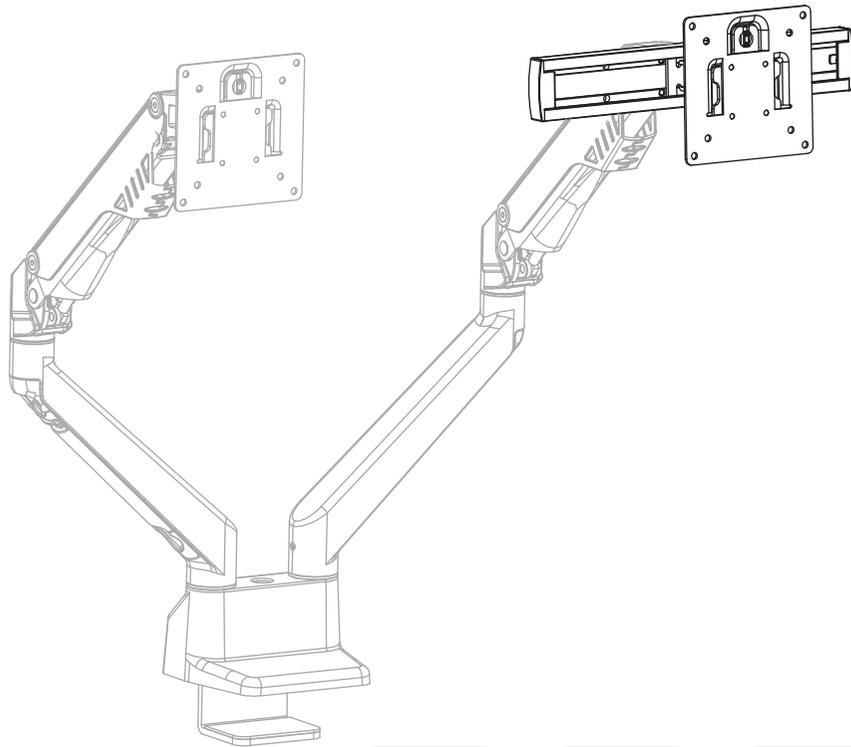


ergoCentric®

1

Parts

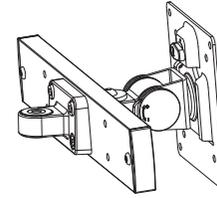

Mini slider
(X1)



VESA plate
(X1)



M4X9mm screws
(X4)



M4X12mm screws
(X4)



Allen wrench
(X2)



spacer
(X1)




Connecting screw
(X1)


2

Remove the original VESA mount

Loosen the connecting screw.

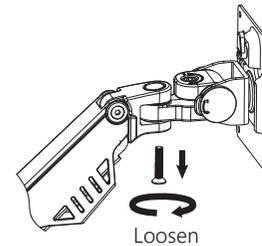

Take down the original VESA mount component.

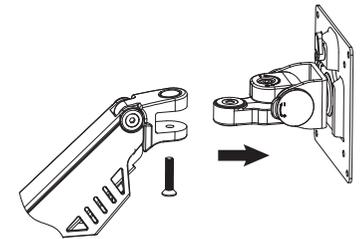


3


Install the mini slide

Insert the mini slide.


Place the metal spacer

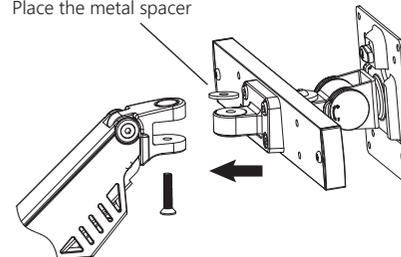

Tighten the connecting screw.

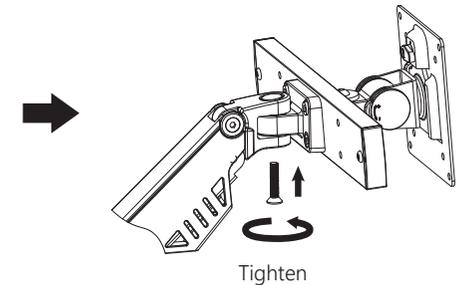

4 Connect VESA plate with monitor

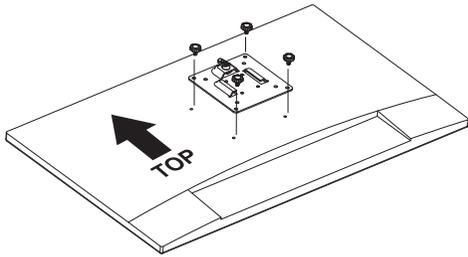

M4X9 screw is the default VESA screw size for most monitors and is designed to be hand-tightened.



M4X12 screw is provided to accommodate monitors requiring longer VESA screws.

5 Monitor installation


Slide in and lock-in.




Before slide in, please make sure the knob on the VESA plate is vertical.






Then turn the knob to right to lock and fix the VESA plate.

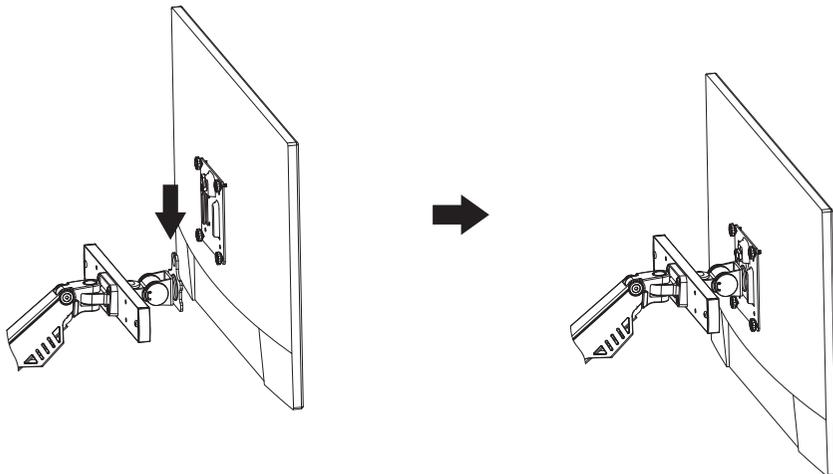

6 Adjustment on the mini slide

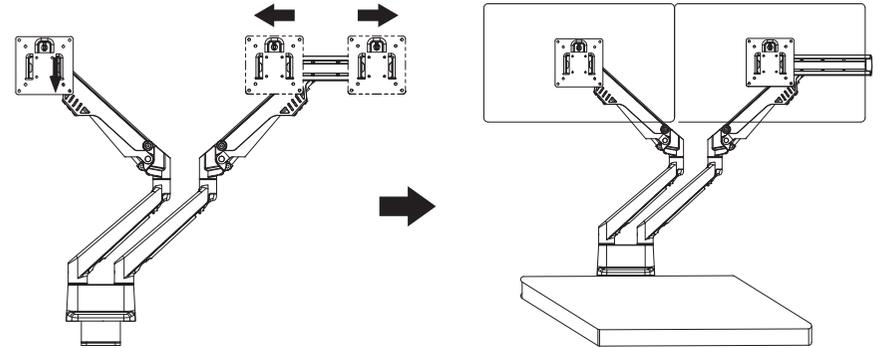

7 3 positions for connection

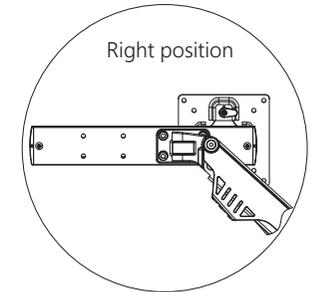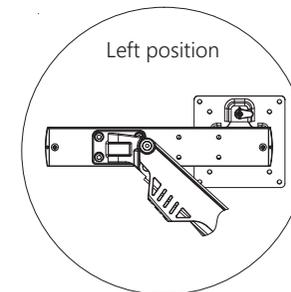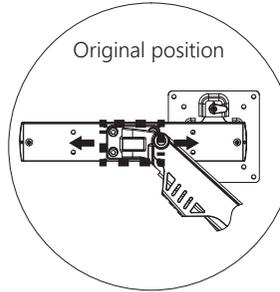

upCentric[®]
Monitor sliders

ergoCentric[®]